


B&W Copier (Kyocera) – Quick Guide



1. Insert your Octopus card



2. Select [Copy] button

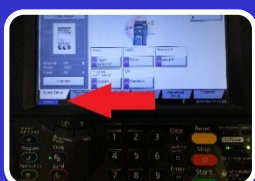

3. Select your copy feature at the “Quick Setup” panel as you like



4. Press [Start] to continue



5. Press eject button to release your Octopus card



6. Take your copy underneath

Remarks:

- Copy Charge: \$ 0.2 per A4 page/\$0.4 per A3 page
- Copy size scale: A3 to A4 zoom 70%/ A4 to A3 141%.
- For specific copy size, such as A5 and B4 , select A4 size paper on the copier panel to continue the process.

