




理光八達通電子支付系統 — 使用指引

Ricoh Octopus Payment System – Operation Guide

於電腦操作 Operation in Computer

1 選擇列印功能 Select Print Function


按 [File] 再選擇 [Print]
Click [File] and select [Print]

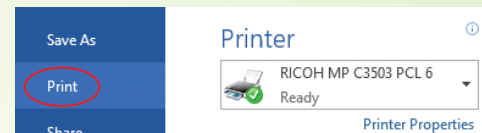

2 選擇列印設定 Select Print Settings

請選擇適當的多功能影印機作黑白或彩色文件打印
Please select the right MFP to print B/W or colour document

選擇列印設定，然後按 **OK** 予以確定
Select Print Settings and then click **OK** to confirm

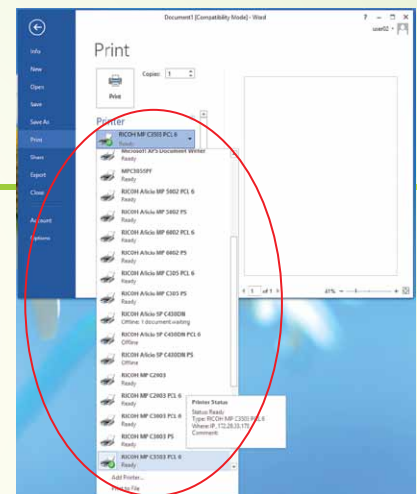

3 輸入核對資料 Select Document Printing Verification Details

屏幕將顯示 [Job Type Details] 視窗
The [Job Type Details] window will pop up

輸入 [User ID] 及 [Password]
Input [User ID] and [Password]

然後按 **OK** 予以確定
Then click **OK** to confirm

